


035609


# ACRYLIC BONNET PROTECTOR INSTALLATION INSTRUCTIONS

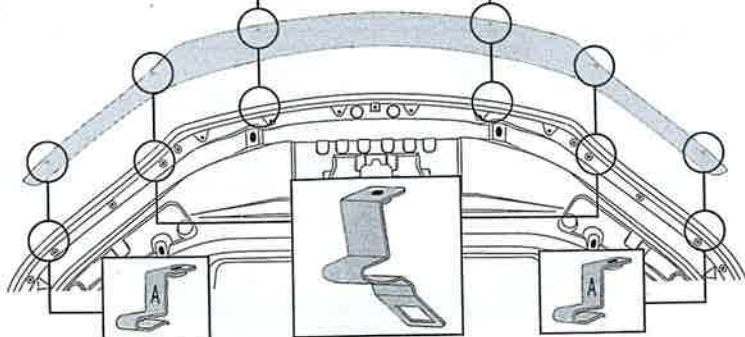


1



2

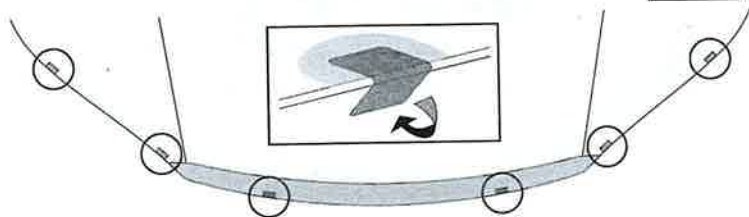


3

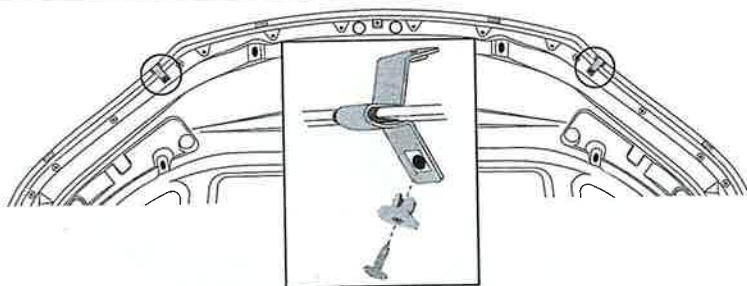


# ACRYLIC BONNET PROTECTOR INSTALLATION INSTRUCTIONS

B2476  
2/2


4

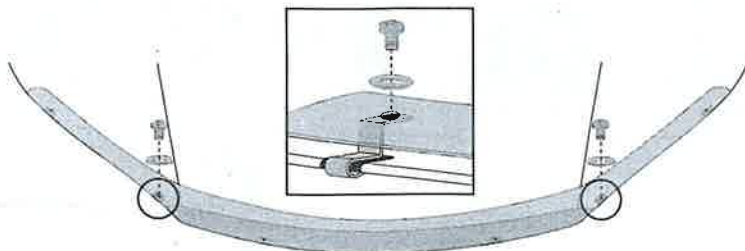

5

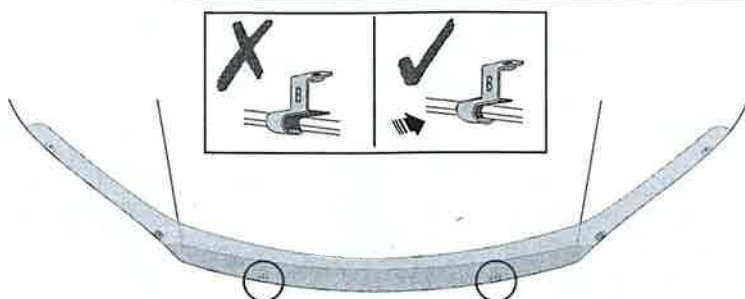

6

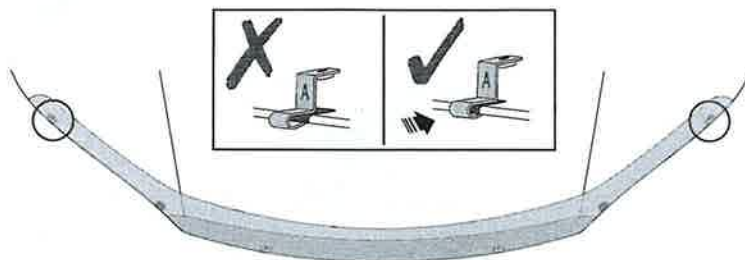

7

