


VW AMAROK MONTERING AV VELTEBØYLE



Demontér plastdeksel fra
undersiden med nebbtang

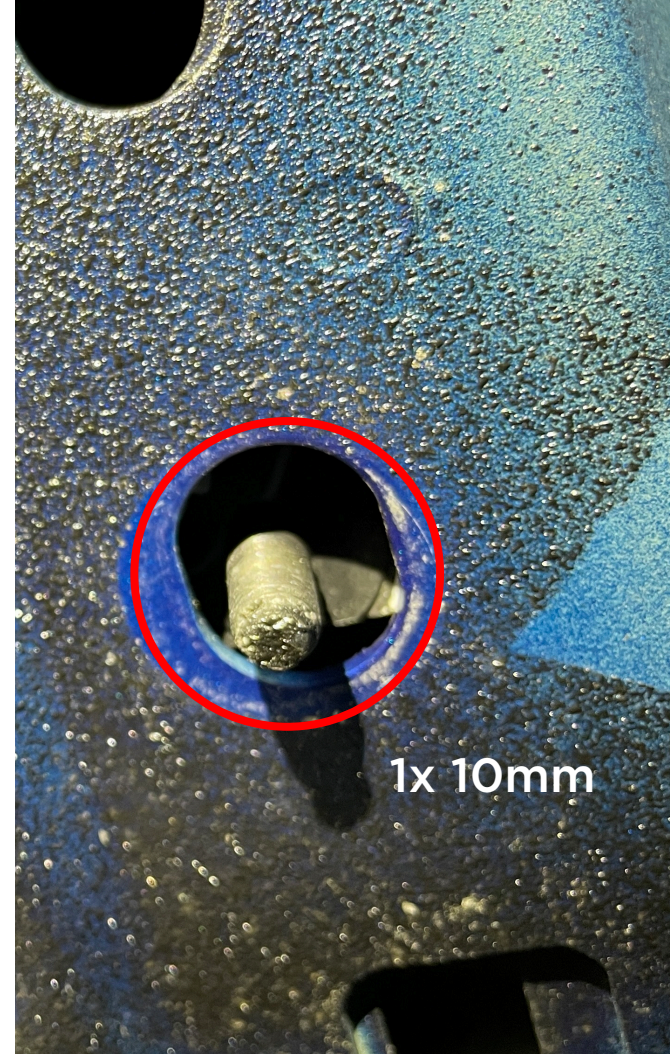


1x 10mm

A close-up photograph of a blue-painted metal plate, likely part of a vehicle chassis. Two circular threaded holes are highlighted with red circles. Two fingers are visible at the top of the frame, pointing towards the holes. The plate has several rectangular cutouts and other smaller circular features. The background is a textured, greyish surface.

Fremre hull med 8 mm gjenger.

Slipe ned støpekanter foran på plastdeksel

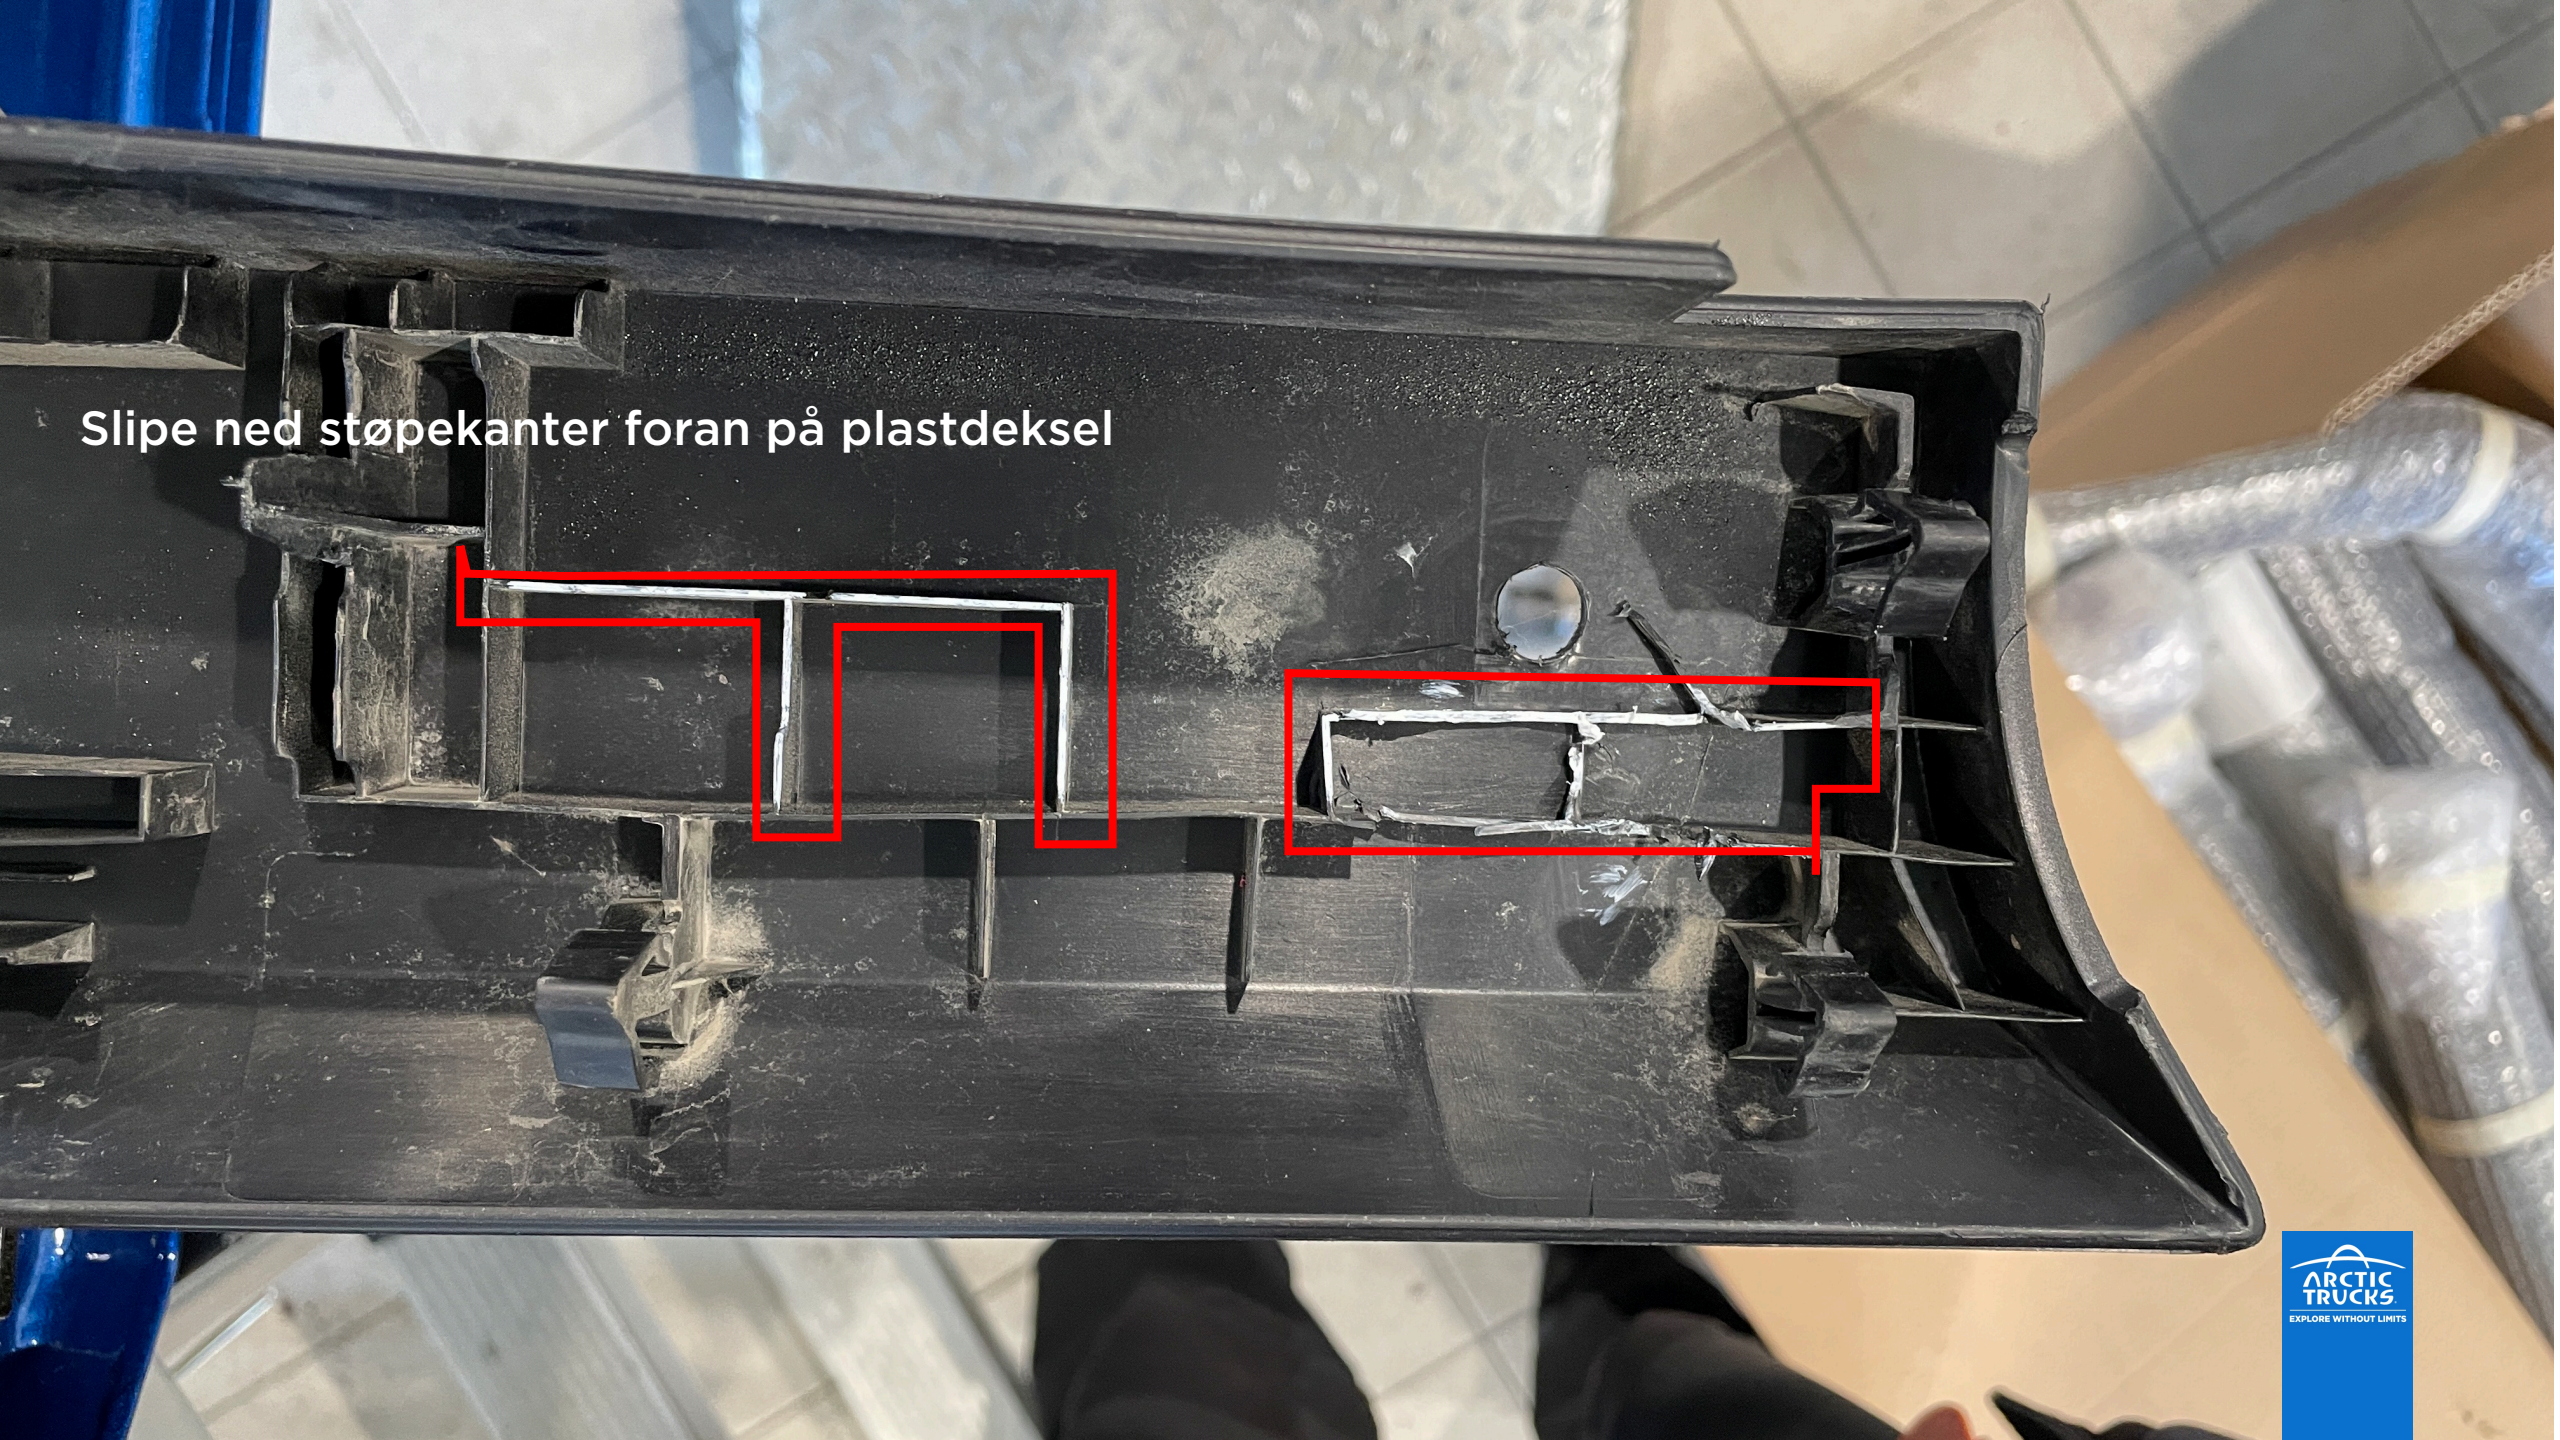



Slipe ned støpekanter bak på plastdeksel

Spacer foran mellom plankant og plastdeksel



NB: Bruk Loctite på gjengene

Spacer bak mellom plankant og plastdeksel

Skruer festes fra undersiden.
10 mm fra innsiden.



78 mm fra fremkant av
fremre spacer til forkant
av bakre spacer.





Monter føtter på plankant før resten av bøylen

Skumplaten limes på
undersiden av fotstykke.

